



Mark center of door thickness for 1" (25mm) hole

8161

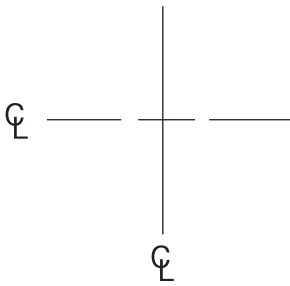

INSTALLATION
TEMPLATE

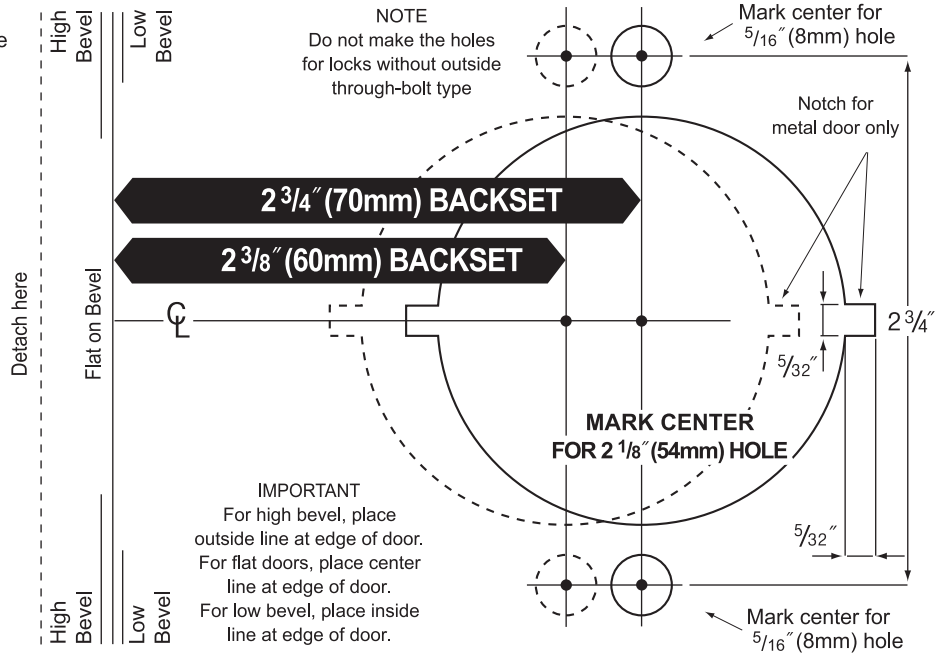

NOTE
Do not make the holes
for locks without outside
through-bolt type

Mark center for
 $\frac{5}{16}$ " (8mm) hole

Notch for
metal door only

$2\frac{3}{4}$ " (70mm) BACKSET

$2\frac{3}{8}$ " (60mm) BACKSET

MARK CENTER
FOR $2\frac{1}{8}$ " (54mm) HOLE

IMPORTANT
For high bevel, place
outside line at edge of door.
For flat doors, place center
line at edge of door.
For low bevel, place inside
line at edge of door.

Mark center for
 $\frac{5}{16}$ " (8mm) hole