


INSTALLATION INSTRUCTIONS

1. Remove backplate from door stop.
2. Place in desired location and mark.
3. Drill 1/8" pilot hole and insert anchor into hole.
4. Fasten backplate with screw.
5. Put door stop over backplate and turn to lock into place.
6. Clean with mild soap, water, and a soft cloth.

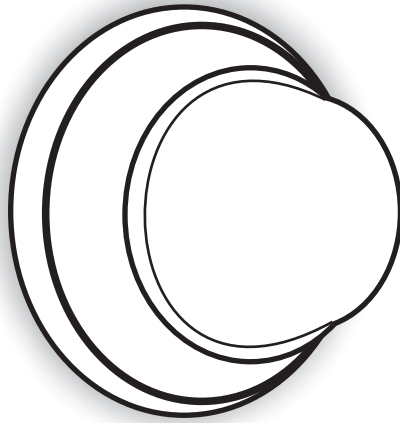

Tools Needed:

- A. Drill
- B. 1/8" Drill bit
- C. Phillips screwdriver
- D. Pencil
- E. Safety goggles

Since 1899 Great Value in Quality Hardware

Parker Hardware mfg corp

PARKER DRIVE PO Box 9882, Englewood NJ 07631-1127 • NU (201) 569 1600
 In NYC (212) 925-4300 • FAX (201) 569 1082 •
 Website: www.sparkar.com
 Email: hardware@sparkar.com

ITEM NO:	DESCRIPTION:	SCALE:
636AL	DOOR STOP - CONVEX	N/A
UNIT:	VERSION:	BY:
inches	ver 1.0	C.C Chen