


INSTALLATION INSTRUCTIONS

1. Remove backplate from door stop.
2. Place in desired location and mark.
3. Drill 1/8" pilot hole and insert anchor into hole.
4. Fasten backplate with screw.
5. Put door stop over backplate and turn to lock into place.
6. Clean with mild soap, water, and a soft cloth.

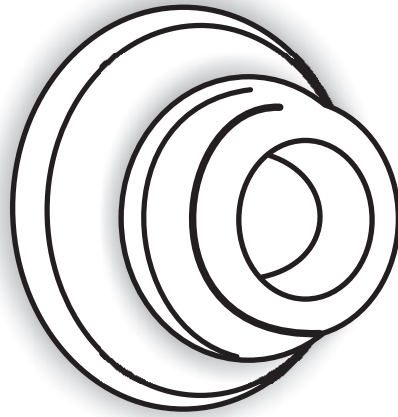

Tools Needed:

- A. Drill
- B. 1/8" Drill bit
- C. Phillips screwdriver
- D. Pencil
- E. Safety goggles

ITEM NO:	DESCRIPTION:	SCALE:
636UAL	DOOR STOP - CONCAVE	N/A
UNIT:	VERSION:	BY:
inches	ver 1.0	C.C Chen